

# HDBaseT EXTENDER



EH-070BT



EH-100BT

## USER MANUAL

V1.0

### Package Content

- 1x Transmitter (EH-070BT-T or EH-100BT-T)
- 1x Receiver (EH-070BT-R or EH-100BT-R)
- 2x Power adapter DC 12V with lock
- 1x IR receiver
- 1x IR blaster
- 1x User Manual
- 8x foot pads

## Overview

The EH series uses the HDBaseT™ technology to extend HDMI signal up to 70/100/150 meters over one CAT-5e or better LAN cable.

## Features


- Supports 4K@24/25/30Hz (4:4:4) and 4K/60 (4:2:0) and 1080p (12bit) and 3D up to 70/100 meters.
- Supports HDMI 2.0
- Supports HDCP 1.4 and 2.2
- Supports 3D pass-through

- Supports CEC pass-through
- Supports RS-232(Bi-direction transfer)
- Supports all frequency band IR control
- Supports all digital audio modes
- Supports HDBaseT Mode
- Supports Long Reach Mode (Only for EH-100BT, Video Resolution Max. 1920x1080p@60Hz / 8bit, Cable Distance Max. 150 Meters)

## Specifications

Function	EH-070BT-T	EH-070BT-R	EH-100BT-T	EH-100BT-R
HDMI Connector	HDMI A-Type Female x 1			
RJ-45 Connector	RJ-45 Jack x 1			
RS232 Connector	DB9 Female x 1			
IR IN	3.5ψ Stereo Jack x 1			
IR OUT	3.5ψ Stereo Jack x 1			
DIP SW	3 Pin x 1			
LED	4 in 1 LED x 1			
DC Jack	v	v	v	v
Max. Resolution	4K@30Hz / 1080p@60Hz			
Cable Distance	70 m (Max.)		100/150 m (Max.)	
Power Adapter (Min.)	DC 12V with lock			
Enclosure	Metal			
Weight	308g	318g	308g	318g
Dimensions (LxWxH)	126x83x25 mm			


### FRONT VIEW(Transmitter / Receiver)

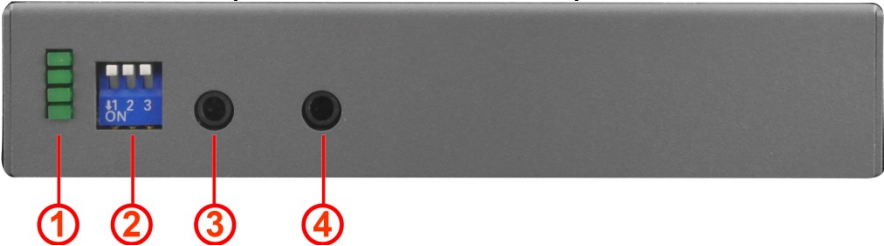

1. POWER / HDCP / LINK / MODE LED
2. DIP SW
  - Pin 1 - OFF : DEFAULT  
ON : F/W UPGRADE Mode
  - Pin 2 – OFF : Long Reach Mode(EH-070BT OFF : Reserved)  
ON : HDBT Mode


- Pin 3 – OFF : AUTO Mode  
ON : MANUAL Mode
3. IR OUT (for IR blaster cable)
  4. IR IN (for IR receiver cable)

### REAR VIEW(Transmitter)

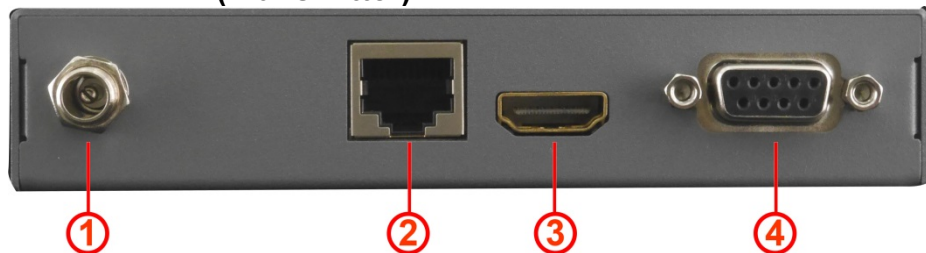

1. Power jack 12V DC
2. LINK (RJ-45 Connector)
3. HDMI IN
4. RS-232

### REAR VIEW(Receiver)

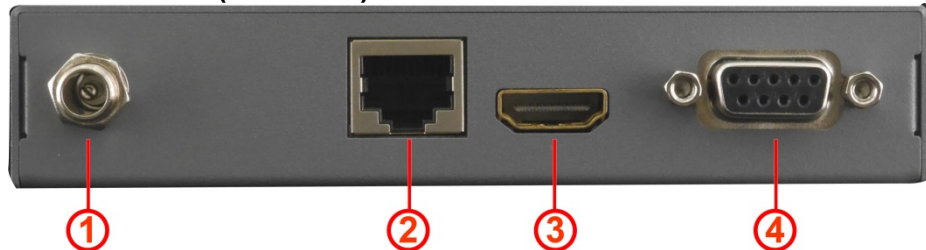

1. Power jack 12V DC
2. LINK(RJ-45 Connector)
3. HDMI OUT
4. RS-232


## Installation

 1. Turn off the BD player and HDTV.
2. Connect the HDMI cable with the BD player and the <HDMI IN> port of HDBaseT extender Transmitter.

3. Connect the HDMI cable with the HDTV and the <HDMI OUT> port of HDBaseT extender Receiver.
4. Connect the LAN cable between the HDBaseT extender Transmitter and Receiver <LINK> port.
5. Connect the power cord and turn on the HDBaseT extender.
6. Turn on the BD player and HDTV.


### IR Blaster Cable :

Connect IR blaster cable to <IR OUT> port, it sits in front of the BD player IR receiver sensor, which is located on the front-panel.



### IR Receiver Cable Directions:

Connect IR receiver cable to <IR IN> port, place the IR Receiver Cable, so that you can point to it easily with your IR remote controller.

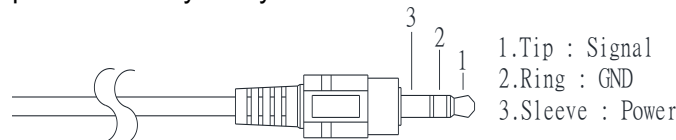

### Trademarks:

All the companies, brand names, and product names referred to this manual are the trademarks or registered trademarks belonging to their respective companies.